


MultiJAMMA Controller Installation and User's Manual

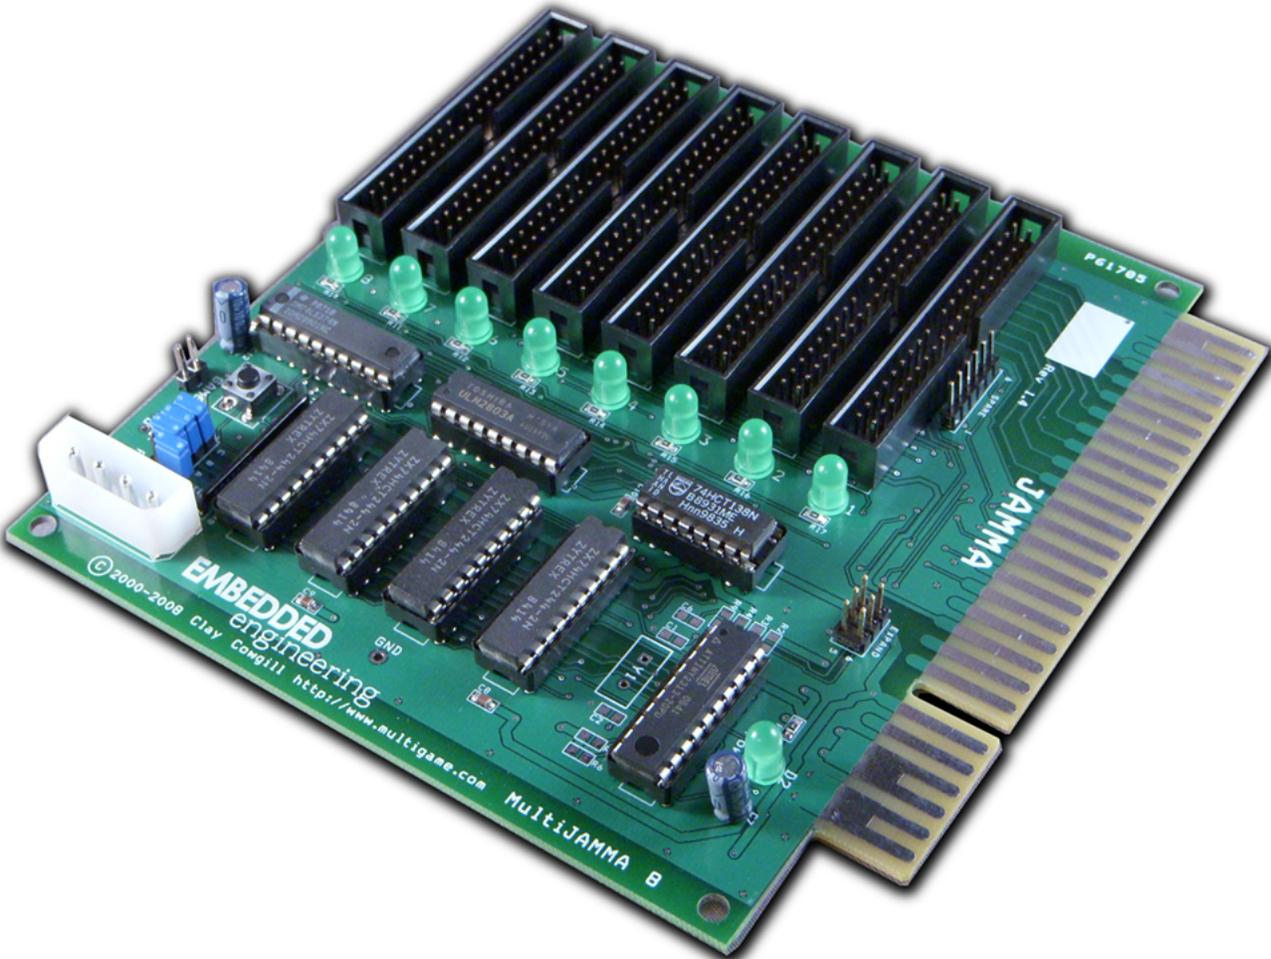

Notice Regarding this Kit

Warning!

Although this kit has been tested and the techniques used will not directly cause harm to your video games, if you do something wrong you can very seriously damage the game electronics!

To perform this kit installation you should:

- Be familiar with safe handling procedures for electronic components.
- Be able to remove and install new power supplies without causing damage.
- Be able to build cable harnesses for power and (optionally) control inputs.
- Be able to follow directions.

Arcade games are rugged equipment, but anytime you start messing around with something (particularly something electronic) you accept a certain amount of risk that you may break something.

This kit carries with it no guaranty of compatibility to your particular game. Although this kit has been tested with numerous JAMMA game boards it is possible that there are JAMMA boards that are incompatible. If you carefully follow these instructions, you should do fine and everything should work. If you feel the complexity of this system is beyond your ability to install, please hire someone local to you to perform the installation. Due to the custom nature of every installation, technical support from Multigame.com is limited to kit behavior only.

Please read these instructions completely through before starting. If at any point you become lost of confused, please consider hiring someone to perform the installation for you. One reversed power connection and you'll have a dead game board(s) and a damaged MultiJAMMA! Because of the risk of "user error", this kit is sold AS-IS. It has been tested and works 100% when shipped, but if anything happens to it that requires repair it IS NOT a free service. Repair rates for the MultiJAMMA Controller start at \$15 plus \$8 return shipping. Repair rates for the MultiJAMMA Switchboards start at \$9 plus \$8 return shipping. Be careful!

By using this kit you agree to the following terms and conditions:

Multigame.com makes no warranties on the MultiJAMMA, expressed, implied, statutory, or in any other communication with you. Multigame.com specifically disclaims any implied warranty of merchantability or fitness for a particular purpose. Multigame.com does not warrant that the operation of the MultiJAMMA will be uninterrupted or error free. In no event will Multigame.com or any supplier of the MultiJAMMA be liable to you or any other person or entity for any damages, including any incidental or consequential damages, expenses, lost profits, lost savings, or other damages arising out of the use of or inability to use the MultiJAMMA even if Multigame.com have been advised of the possibility of such damages. This kit is provided AS-IS. By using the MultiJAMMA you agree to the above terms and conditions. If you choose not to abide by these terms you must return the MultiJAMMA to the place of purchase within 7 days of receiving it for a full refund, less any restocking fees and shipping/handing expenses.

MultiJAMMA Controller User Guide and Installation Manual Table of Contents:

INTRODUCTION:	4
CONTROLLER FEATURES:	4
CONTROLLER CONNECTIONS:	5
SPARE INPUT CONNECTOR (A):.....	6
JAMMA CARD-EDGE CONNECTOR (B):.....	6
EXPANSION CONNECTOR (C):.....	6
GROUND POINT (D):.....	6
AUXILIARY POWER CONNECTOR (E):.....	6
COOLING FAN CONNECTION POINTS (F):.....	7
CONFIGURATION JUMPERS (G):.....	7
<i>Jumper Function Summary:</i>	8
<i>Example Jumper Settings:</i>	8
GAME SELECT CONNECTOR (H):.....	9
GAME SELECT SWITCH (I):.....	9
SLOT SELECT LEDs (J):.....	9
EIGHT 40 PIN CONNECTORS FOR SWITCHBOARDS (K):.....	9
GETTING STARTED:	10
THE MULTIJAMMA WILL NOT:.....	10
THE MULTIJAMMA WILL:.....	11
MONITOR SELECTION:	11
POWER SUPPLY SELECTION:	11
TOOLS/SUPPLIES REQUIRED:	12
MULTIJAMMA CONTROLLER INSTALLATION:	12
JUMPER SETTINGS:.....	12
FAN CONNECTIONS:.....	12
REMOVE POWER FROM THE CABINET:.....	13
CONNECT ALL GROUNDS TOGETHER:.....	13
VERIFY THAT GROUNDS ARE CONNECTED TOGETHER:.....	13
ATTACH “GAME SELECT” BUTTON:.....	13
PREPARING THE SWITCHBOARDS:.....	13
<i>Power Connection:</i>	13
<i>Free Play Settings:</i>	13
CONNECTING THE SWITCHBOARD CABLES:.....	14
SMALL INSTALLATION EXAMPLE:	14
LARGE INSTALLATION EXAMPLE:	15
JAMMA PINOUT REFERENCE:	16
TROUBLESHOOTING:	16
ANYTIME YOU SUSPECT AN ERROR, ALWAYS CHECK THE FOLLOWING FIRST:.....	16
ALL OF THE SLOT LEDs ARE ON AT ONCE.....	17
MORE THAN ONE OF THE SLOT LEDs ARE ON AT ONCE.....	17
DIM PICTURE ON MONITOR.....	17
MONITOR DISPLAY ROLLS OR WON’T SYNC.....	17
GAME GRAPHICS MESSED UP/GAME DOESN’T DISPLAY PICTURE.....	17
NO SOUND, OR POOR QUALITY SOUND.....	17
GAMES GENERATE CREDITS OR START WHEN THE CABINET IS TURNED ON.....	18
ADDITIONAL HELP AND INFORMATION:	18

Introduction:

The MultiJAMMA system is designed to allow up to eight JAMMA standard arcade game boards to be connected in a single cabinet and allow easy electronic switching between the games with the push of a button (or button combination).

A MultiJAMMA installation will consist of a MultiJAMMA Controller and anywhere from two to eight MultiJAMMA Switchboards. The Controller coordinates switching between the games while the Switchboards handle the actual electrical signal routing. Switchboards connect to the MultiJAMMA Controller by a 40 pin ribbon cable. JAMMA Game boards plug into the Switchboards and the MultiJAMMA Controller plugs into the JAMMA harness in the arcade game cabinet.


Because most arcade game power supplies are designed to run a single arcade game board, you will need to add additional power supplies to the game cabinet to power all of the boards.

Controller Features:

- Each Controller board can switch up to 8 JAMMA games with the push of a button or combination of Player 1 and Player 2 start buttons.
- Works for coin-operated or free-play. (Coin drops only credit the selected game. Service switch only credits the selected game.)
- Free-play mode generates "virtual credits" so it works with game boards that don't have a built-in free-play setting. (Early classic games, etc.)
- Allows boards with or without built-in free-play settings to be easily mixed and matched -- just press Start and the game starts!
- Game-select switch included on MultiJAMMA main board for easier installation and trouble-shooting. (No need to go around front and hit the game-select button when working inside the cabinet.)
- Microprocessor controlled for fast, flexible switching.
- No "dead spots". The Controller will automatically cycle through the active game boards attached (2 to 8), so if you run with less than 8 boards you won't see a black screen when switching over "empty" slots.
- Remembers the last selected game and automatically powers-up with it selected the next time the game is turned on.
- Expandable. Start with a two-game switcher and then add additional Switchboards as your needs and board collection grows.
- Controller board includes two 12V fan outputs for additional cabinet cooling if desired.

- All game boards are powered for instantaneous switching and no "bootup" time. A must for location/coin-op use!
- Uses inexpensive and reliable "PC" type power supplies and IDE hard-drive cables for connections.
- *(NEW)* Switchboards can be plugged in to any slot on the Controller—games are automatically sensed.
- *(NEW)* Eight LEDs on the Controller show which slot is active in addition to the LEDs on the switchboards.
- *(NEW)* Optionally enable the use of a simultaneous press on Player 1 Start + Player 2 Start to switch games.
- *(NEW)* Supports a single, unified coin counter to count total coins for all games. (Additional hardware required, email for details.)
- *(NEW)* Supports data logging to record which games are played (and when), when games are switched, etc. (Additional hardware required, email for details.)


Controller Connections:

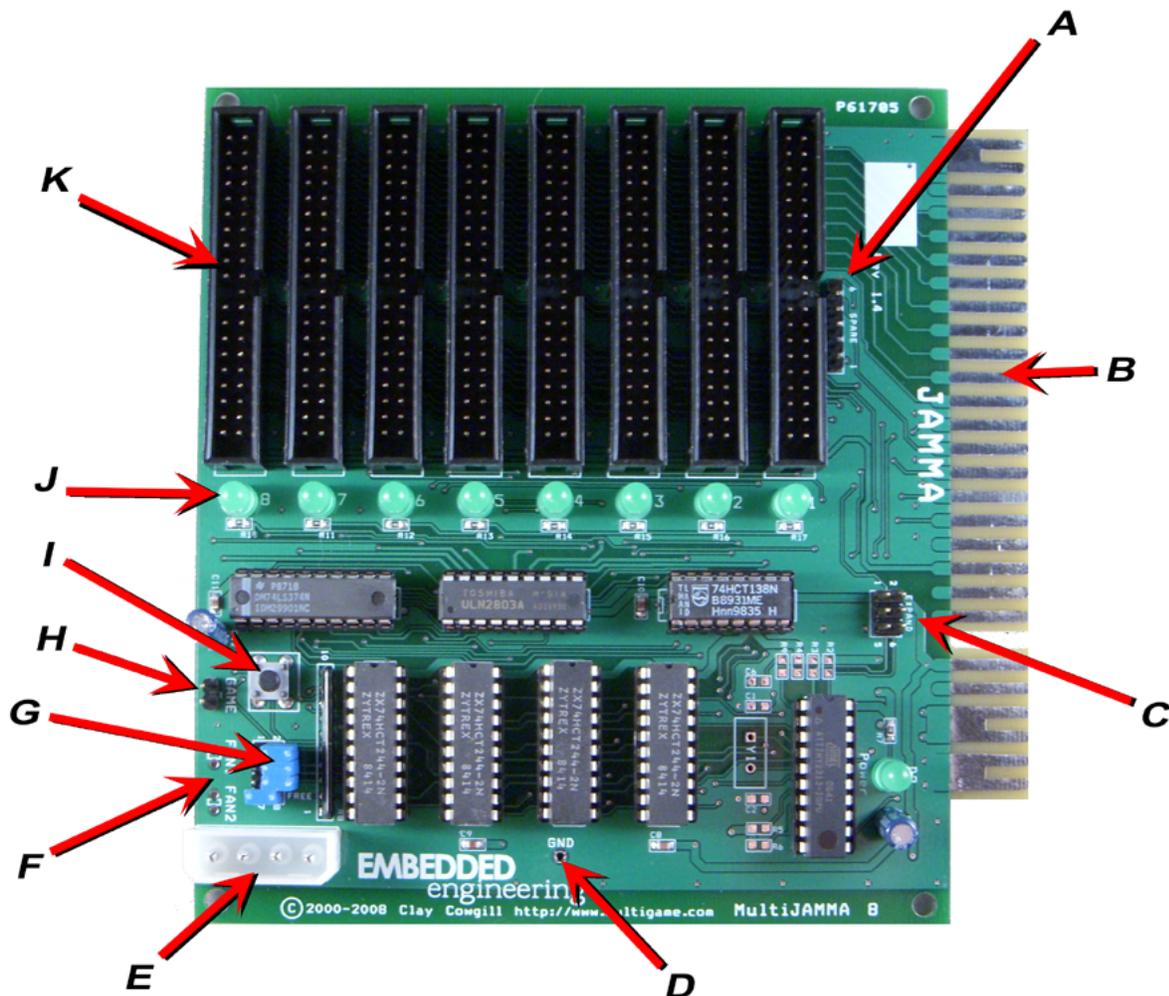

- A = Spare input connector.
- B = JAMMA card-edge connector.
- C = Expansion connector. (Used for optional Datalogger and Coin Counter peripherals)
- D = Ground point.
- E = Auxiliary power connector.
- F = Cooling fan connection points.
- G = Configuration jumpers.
- H = Game select connector.
- I = Game select switch.
- J = Eight slot select LEDs
- K= Eight 40 pin connectors for Switchboards.

Spare Input Connector (A):

 The spare input connector provides a ground pin and four additional input lines that go to each Switchboard. If you are going to use games with more than the standard JAMMA buttons you can wire up additional buttons through this connector.



- 1 = spare input 1
- 2 = spare input 2
- 3 = spare input 3
- 4 = spare input 4
- 5 = No Connection
- 6 = Signal Ground

JAMMA Card-Edge Connector (B):

This card-edge plugs into the JAMMA harness in the arcade game cabinet that you're equipping with the MultiJAMMA. Only +5VDC and Ground are necessary for power on the harness, however be aware that any signals you need for the game boards you're attaching need to be present on the connector. (This is mainly an issue for some "home-made" JAMMA cables that only connect the minimum number of wires needed for a particular game and not all 56 wires.)

Expansion Connector (C):


This connector is used for the optional Datalogger or Coin Counter boards. The Coin Counter provides a single counter for all coins into the machine (regardless of which game is selected) while the Datalogger is able to record which game is credited as well as at what time, total coins, etc. Email for more details on either of these accessories!

Ground Point (D):

This is a point that is available to directly connect the power supply ground from any additional power supplies you add to the cabinet. It is critical that all power supplies are connected to the same ground reference!

Auxiliary Power Connector (E):

This connector is a standard "PC" hard-drive/floppy drive power connector. If you want to power additional 12 volt fans from the MultiJAMMA Controller you need to connect +12VDC to this connector. This also serves as a ground point for additional power supplies if Ground Point (E) is already used or inconvenient. It is critical that all power supplies are connected to the same ground reference!

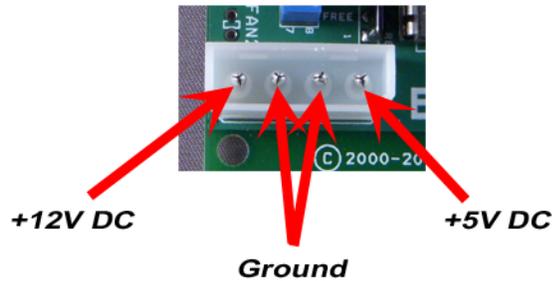

Cooling Fan Connection Points (F):

These are for two .1" spaced headers to allow connection of standard "PC" type 12V cooling fans. Since there is some risk that you could attach a switch to one of the fan headers instead of the "Game Select" header these are left unpopulated unless you choose to use them. You may solder pin headers into the holes, or solders wires for the fans directly there as well.

Configuration Jumpers (G):

The MultiJAMMA uses four jumpers for configuration settings. These jumpers tell the how to function in different 'modes'. These jumpers are largely different that older (pre-revision 1.4) MultiJAMMA devices, so if you are used to the old version you will need to pay a little extra attention here.

Since attached games are automatically detected by the MultiJAMMA's microcontroller now, the jumpers are no longer used to set the number of games in the system as in previous generations. The following table and illustrations show examples of the jumper settings.

Jumper 'C' selects either Datalogger or Coin Counter options. (If you do not need either of those the setting does not matter.

Jumper 'B' selects either "home" or "arcade" modes. When set to "home" mode (jumper on), the MultiJAMMA will switch games either by a dedicated game select button (or the button on the MultiJAMMA Controller board), or by simultaneously pressing the Player 1 and Player 2 start buttons. When set to "arcade" mode (jumper off) the MultiJAMMA will only switch games in response to a dedicated game select button.

Jumper 'A' performs a couple of different functions depending on the setting of Jumper B (described above). When Jumper B is on, Jumper A will determine the amount of time that the Player 1 and Player 2 Start buttons needs to be held down before switching to the next game (either 'long' or 'short'). When Jumper B is off, Jumper A will determines the amount of time between switching games when the dedicated game select button is held down (either 'long' or 'short').





The 'FREE' jumper is used for selecting freeplay modes as described later in the manual.


In summary, the jumpers can be broken down as follows:

Jumper Function Summary:

	ON	OFF
C	Data Logger Enabled	Coin Counter Enabled
B	P1+P2 Start Switching	Dedicated Button Switching
A	Long switching time	Short switching time
FREE	Freeplay Enabled	Freeplay Disabled

Example Jumper Settings:

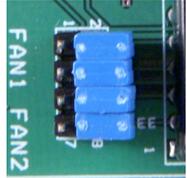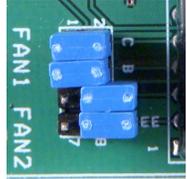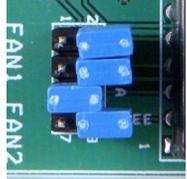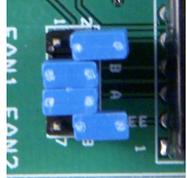	Coin Counter Option Enabled Game Switching by dedicated button only. Short switching time. Freeplay Off
	Datalogger Option Enabled Game Switching by dedicated button only. Short switching time. Freeplay Off
	Coin Counter Option Enabled Game Switching by dedicated button or P1+P2 Start combo. Short switching time. Freeplay Off
	Datalogger Option Enabled Game Switching by dedicated button or P1+P2 Start combo. Short switching time. Freeplay Off
	Coin Counter Option Enabled Game Switching by dedicated button only. Long switching time. Freeplay Off
	Datalogger Option Enabled Game Switching by dedicated button only. Long switching time. Freeplay Off
	Coin Counter Option Enabled Game Switching by dedicated button or P1+P2 Start combo. Long switching time. Freeplay Off

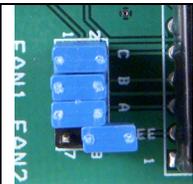

Datalogger Option Enabled
Game Switching by dedicated button or P1+P2 Start combo.
Long switching time.
Freeplay Off

Setting the “FREE” jumper on any of the above combinations simply includes the freeplay behaviour described below to the other functions in the table.

Game Select Connector (H):

The Game Select Connector is a .1” two-pin header that is used to connect the “main” Game Select button for the system. The size of the button and mounting location of this button are up to the user, but it should be a Normally Open momentary type. (Just like a “normal” arcade game button.) Closing the switch that attaches to these contacts results in the MultiJAMMA Controller selecting the game in the next slot.

We have found that in an arcade setting, using a backlit pushbutton (like used in 8-liners or video poker machines) with a “Game Select” label works well.

Game Select Switch (I):


Located above the Jumpers is the Game Select Switch. Pressing this button when the system is on and operating will result in the MultiJAMMA Controller selecting the game in the next slot. This button is meant to make installation and testing easier since it functions even when the “main” Game Select button isn’t yet hooked up in the cabinet.

Slot select LEDs (J):

These eight LEDs will light one at a time when a game is selected. The slot closest to the lit LED is the one that is active. If multiple LEDs are lit, press and hold down the game select switch on the MultiJAMMA Controller board until all the LEDs go out and only one LED is lit at a time. If multiple LEDs remain lit, make sure that all the connected boards have power applied to them.

Eight 40 pin connectors for Switchboards (K):

These eight connectors go to the MultiJAMMA Switchboards. Switchboards come with cables and are keyed to prevent inserting them backwards into the switchboard. If longer cables are necessary for your particular installation you may use standard “PC” IDE Hard-drive cables. Note that longer cables (or poor quality short cables) can effect video and audio quality in some cases. Correct cable orientation for connection to the MultiJAMMA Controller is shown below.

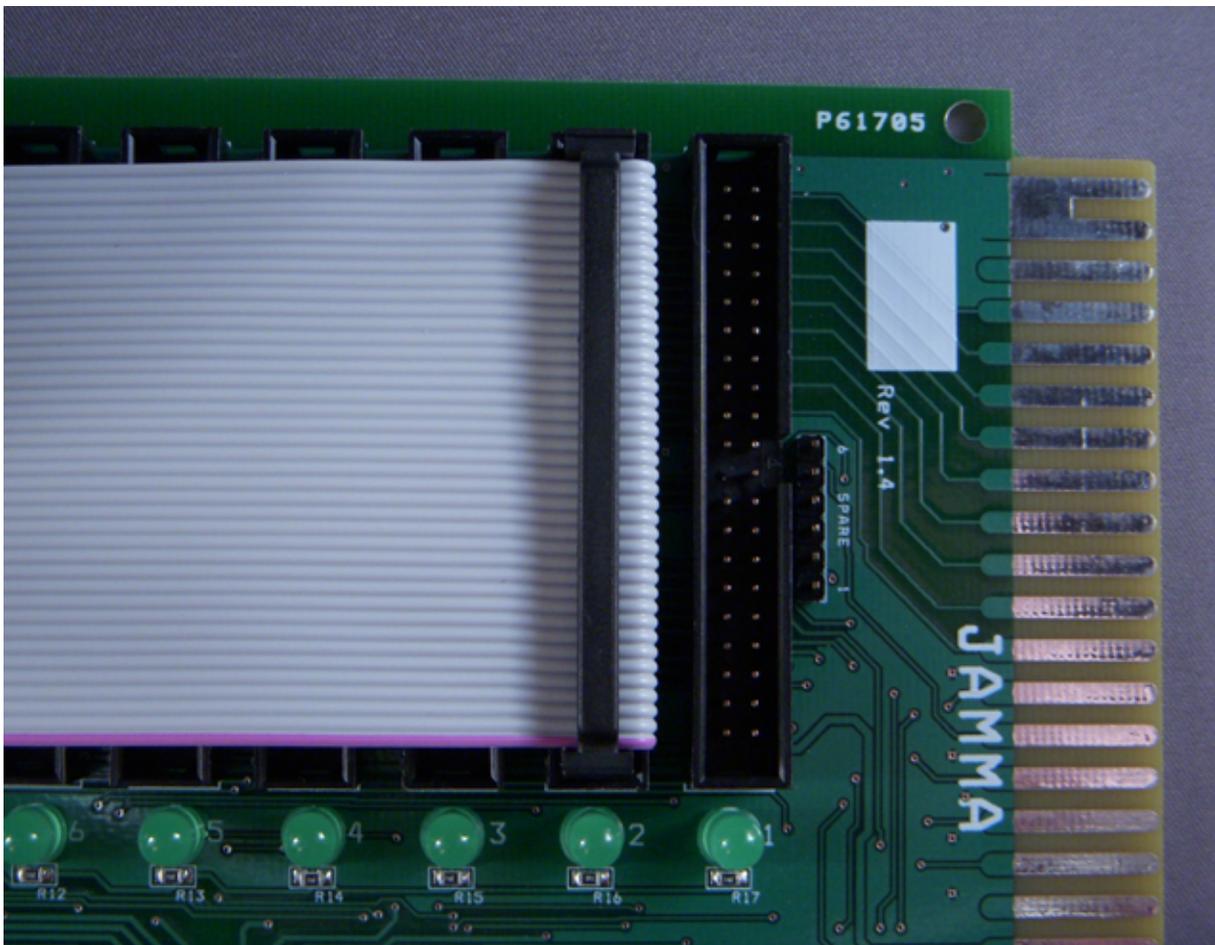

Getting Started:

The MultiJAMMA is really just a fancy “switchbox”. When told to, it will disconnect signals from one point and reconnect them at another point. The signals coming out of the MultiJAMMA Controller will only be as good as the signals going in (“garbage in, garbage out”). Installing the MultiJAMMA Controller into a cabinet that isn’t 100% functional, has flakey controls, a bad picture, etc, will just let you have up to eight games in a cabinet that isn’t 100% functional, has flakey controls, and a bad picture. The system will only perform as well as the cabinet hardware allows it.

The MultiJAMMA Will Not:

- Rotate Horizontal Games to play on a Vertical monitor.
- Rotate Vertical Games to play on a Horizontal monitor.
- Automatically adjust the monitor settings to games with different sync rates.
- Run reliably (or safely!) unless additional power is provided in the cabinet (extra power supply(s) required).

The MultiJAMMA Will:

- Switch between up to eight games without needing to plug and un-plug game boards inside the cabinet.
- Allow all games to use free-play. (Even those without free-play settings.)
- Switch only through the number of games you have attached.
- ...and lots of other stuff!

There are some important considerations when using the MultiJAMMA. In particular, Monitor selection and Power Supply.

Monitor Selection:

The MultiJAMMA will work best with an "auto-sync" (multi-sync) type game monitor. (In general this is most any monitor made after about 1994 or so, and most any that came in a factory-built "JAMMA cabinet", but there are other ones as well.) It is possible to use the MultiJAMMA on an older manual-sync monitor, but depending on your game boards the display on some games could "roll" or not sync without manually tweaking the monitor controls when you switch games.

To test your monitor you can do the following:

1. Collect the game boards you would like to use with the MultiJAMMA.
2. One at a time, plug in each game board and turn on your game. Make sure the picture looks "normal" without having to make any adjustments on the monitor.

If the monitor did not sync on one or more of the games, or if you had to manually tweak the monitor to get it to sync (I warned you not to!), the MultiJAMMA will act the same way. (So if one of the games "rolls" on the monitor without the MultiJAMMA, it will do the same through the MultiJAMMA too!)

You may be able to set an older manual-sync monitor to a setting that will sync for all the games through trial and error. It will depend on the monitor and the games however.

Power Supply Selection:

You will need to add an additional power supply (or two) to your game cabinet to supply power for the game boards. It is not included with the MultiJAMMA. The MultiJAMMA will use the power supply in your JAMMA cabinet for its own power, but additional power is needed for game boards connected to the MultiJAMMA Switchboards. The switching power supplies used in personal computers are recommended for use with the MultiJAMMA.

Power requirements for the additional power supply(s) will vary with your games, but in general you can use the following guideline:

1. Assume 5 Amps of +5 Volt power for every game board.
2. Assume 1 Amp of +12 Volt power for every game board.
3. Some -5V current (for some games only).

When in doubt, go with bigger power supplies.

Following this example, a full 8-game MultiJAMMA would require:

8 * 5 Amps = 40 Amps of +5 Volt power

8 * 1 Amps = 8 Amps of +12 Volt power

Some -5V supply

Since most "PC" power supplies are rated for about 20A of +5 Volt power, a "safe" configuration would be two PC power supplies-- one for every four games. (The 5 Amp per game "rule of thumb" already has safety margin calculated in, so being right at the rated limit of the power supply is OK since the rating should be "overkill" already.)

Users with electronics experience can measure the current being drawn by their games and select a power supply more specifically suited for their application if so desired.

If in doubt, buy a power supply that you know supplies more current than you need. Don't skimp on buying the power supplies either-- they're providing power to your game boards, and you don't want a bad power supply failing and killing your boards!

Be sure to read the section in the MultiJAMMA Switchboard Manual about power supply wiring and connections.

Tools/Supplies Required:

Most installations will need some simple tools and supplies to get started.

- A 100% working JAMMA Arcade Game Cabinet with an auto-sync monitor.
- One or two extra power supplies (depending on number of games).
- Wood screws (to mount the MultiJAMMA Controller to the side of the cabinet if so desired).
- Screw driver (to go with the wood screws).
- Wire cutter, electrical tape, connectors, etc. (For hooking up power supplies and extra button inputs.)
- JAMMA Arcade Game boards you want to use.
- A Multimeter to check power supply operation and verify wiring.

MultiJAMMA Controller Installation:

Jumper Settings:

Start by setting the jumpers on the MultiJAMMA to the features you would like to use and whether or not free-play mode is activated. Use the diagrams in the "Configuration Jumpers (G)" section as a guide.

Fan Connections:

If you are going to use the MultiJAMMA controller to power any +12VDC fans for additional cooling, install the headers or wires for the fans to the MultiJAMMA Controller now. (See "Cooling Fan Connection Points (F)" for reference.)

Remove Power from the Cabinet:

Make sure the cabinet you're installing the MultiJAMMA into is turned off and unplugged from the wall outlet.

Connect all Grounds together:

The MultiJAMMA Controller **MUST** be connected to the ground of the additional power supplies you will be using. Run at least an 18 gauge wire from the "GND" point on the MultiJAMMA to the ground lines on any extra power supplies you will be using. If you are attaching a "disk drive" power lead to the MultiJAMMA controller's socket that will provide the ground. Note that any additional power supplies should also have their ground lines connected together. (This insures that all the power supplies have the same ground reference and prevent damage to any components.)

Verify that Grounds are connected together:

Once you have attached ground on the MultiJAMMA Controller to the rest of the power supplies, plug the MultiJAMMA Controller into the JAMMA Harness of the game and (if desired) secure the MultiJAMMA to the cabinet. (Be careful not to use screws that are too long or will poke through the cabinet sides!)

Use a multimeter set to Ohms (resistance) to measure from the Ground on the MultiJAMMA Controller to the grounds of all the power supplies and the JAMMA harness. All should read very low resistance (<1 ohm) indicating they're directly connected together.

Attach "Game Select" Button:

If you are going to use a dedicated game selection button (and not the Player 1 Start + Player 2 Start jumper setting) connect the wires from the button you are going to use to change games to the "Game Select Connector" (see previous section for location). The button should be a push-button, normally open, momentary type.

Note that if you choose to use the Player 1 Start + Player 2 Start jumper option that there is a chance for unexpected side effects on some games. (For example, if a game has credits on it and the player presses both P1 and P2 start to switch games, the game with credits could start playing prior to the switch occurring. Because of this, the P1+P2 Start option is really only recommended for home use.)

Preparing the Switchboards:

Power Connection:

Connect the power supplies to the Switchboards per the wiring diagrams in the MultiJAMMA Switchboard manual. If the game only requires +5V, +12V, and Ground you may use the "PC" disk-drive connector. For games that require -5VDC or that will consume larger amounts of current it is recommended to use the 8-pin power connector.

Free Play Settings:

If your installation is going to be coin-operated, the Switchboards should be jumpered to the "Pay/Coins" setting. If you are using Free-Play and the game board does not have a built-in free play setting, jumper the Switchboard for the "Free/Phantom" setting. If you are using Free-Play and the game board also has a free-play setting enabled, set the Switchboard jumpers for the "Free/Normal" setting. These settings and jumper positions are described in the MultiJAMMA Switchboard manual.

Connecting the Switchboard cables:


Now that the MultiJAMMA Controller is securely mounted and your Switchboards are properly jumpered, you can attach the cables coming from the Switchboards. The 40 pin connectors are numbered from one to eight. Switching begins at number one and continues up to the maximum game number set by the configuration jumpers (from two to eight games). The connectors are keyed to prevent cables from being installed backwards, but if you purchase longer cables or use other IDE driver cables they may not be keyed like the cables that come with the MultiJAMMA. Exercise care that the cables you use are plugged in correctly.

The other end of the Switchboard cables (the one with the circuit board attached) goes to the JAMMA game boards. The “parts side” of the Switchboard should be facing the same direction as the “parts side” of the game board. Note that the Switchboards are NOT keyed since many JAMMA adapters and bootleg games do not include the key slot. The key location is noted on the edge-board—make sure it matches the key slot on your game board if it exists. (Failure to connect the Switchboard properly can result in incorrect voltages going to the game board which can result in destruction of the board and/or MultiJAMMA. Be careful.)

Refer to the MultiJAMMA Switchboard manual for a detailed explanation and additional setup and testing steps when connecting the Switchboards.

Small Installation Example:


A typical small system (two to four games) will be something like this:

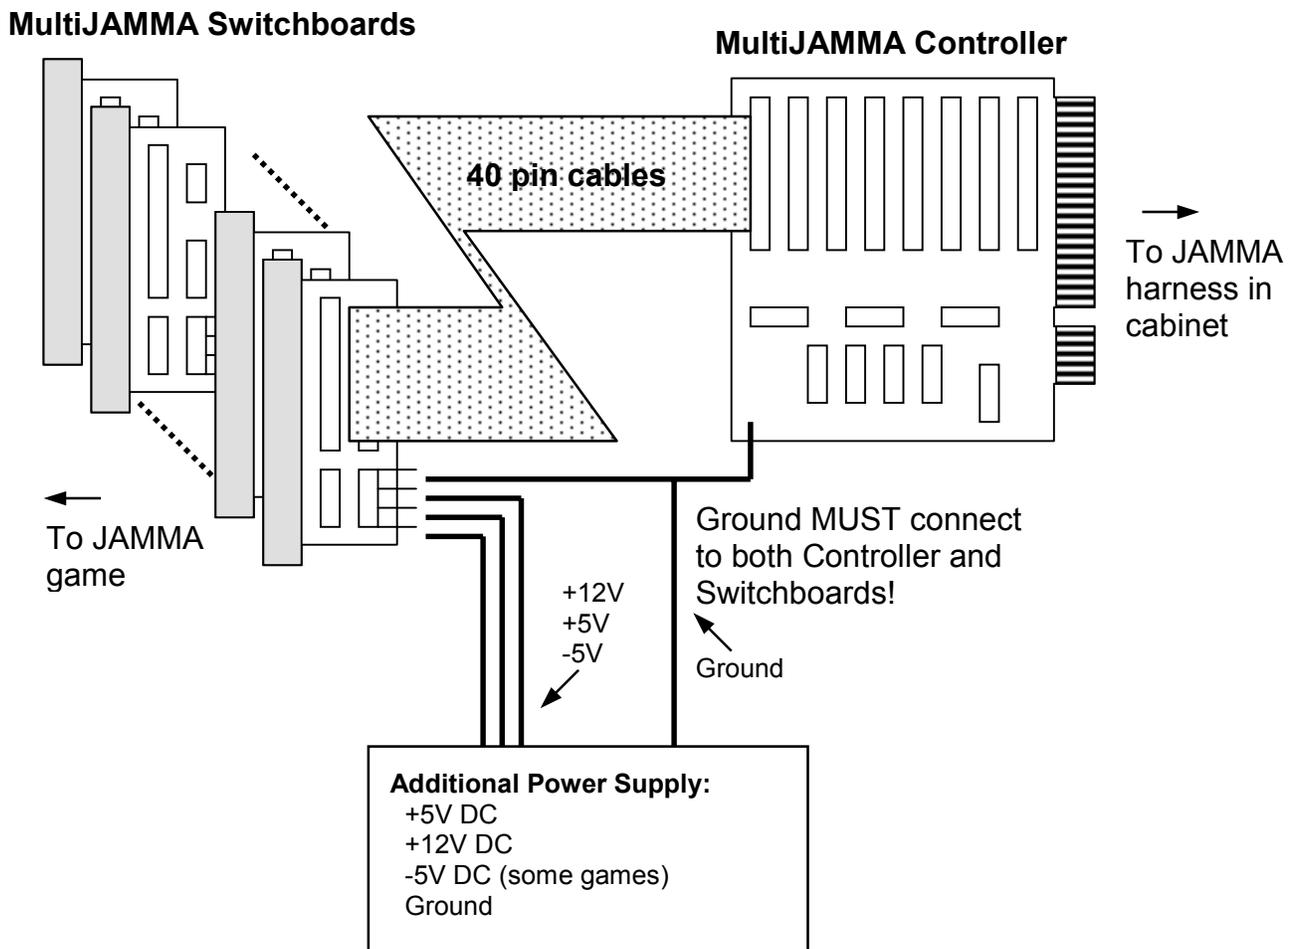

Large Installation Example:

For a larger system (five or more games) multiple power supplies will often be used:

MultiJAMMA Switchboards

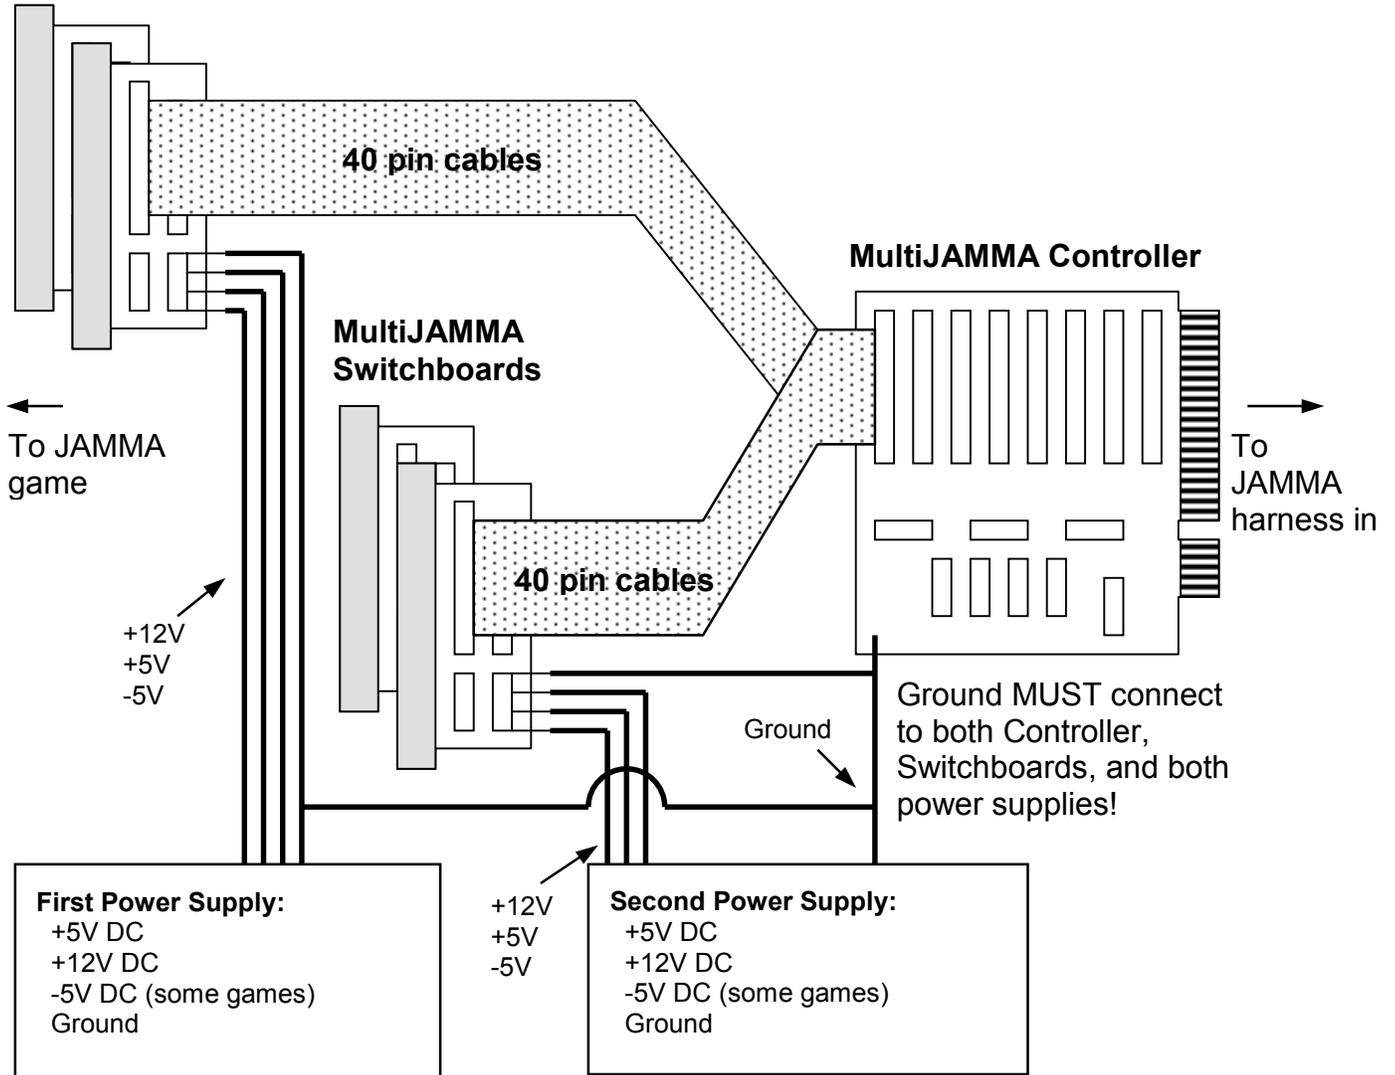

JAMMA Pinout Reference:

Solder Side	Pin #	Pin #	Parts Side
GND	A	1	GND
GND	B	2	GND
+5VDC	C	3	+5VDC
+5VDC	D	4	+5VDC
-5VDC	E	5	-5VDC
+12VDC	F	6	+12VDC
- KEY -	H	7	- KEY -
<i>Coin Counter # 2</i>	J	8	<i>Coin Counter # 1</i>
<i>Lock Out Coil # 2</i>	K	9	<i>Lock Out Coin # 2</i>
Speaker (-)	L	10	Speaker (+)
	M	11	
Video Green	N	12	Video Red
Video Sync	P	13	Video Blue
Service Switch	R	14	Video GND
Tilt Switch	S	15	Test Switch
Coin Switch # 2	T	16	Coin Switch # 1
2P Start	Y	17	1P Start
2P Up	V	18	1P Up
2P Down	W	19	1P Down
2P Left	X	20	1P Left
2P Right	Y	21	1P Right
2P Button 1	Z	22	1P Button 1
2P Button 2	a	23	1P Button 2
2P Button 3	b	24	1P Button 3
2P Button 4	c	25	1P Button 4
	d	26	
GND	e	27	GND
GND	f	28	GND

(signals in "italic" are not supported on the MultiJAMMA.)

Note that a coin counter can be added with the optional coin counter accessory. Email for details.

Troubleshooting:

The MultiJAMMA Controller is fully tested prior to shipment, so a hardware problem is relatively unlikely. Certain installation errors can create situations that may look like a hardware fault—some of these include (but are not necessarily limited to):

Anytime you suspect an error, always check the following first:

- Check voltages **at the game board** and at several points on the board, all should be within +/-10% of their specified value.

- Are all power supplies connected by common grounds?
- Is everything plugged in? (Obvious, but you'd be surprised how many times this causes problems!)
- Test the cabinet with the MultiJAMMA unplugged and a known working JAMMA board to verify that the monitor, speakers, and controls all work properly.

All of the slot LEDs are on at once.

This will typically occur when you first use the MultiJAMMA controller. Press and hold the game select button on the MultiJAMMA Controller board until all the lights go out (they should turn off one at a time). Only a single LED should be on at any time during normal operation. If you have more than one LED on verify that all the game boards you have attached have the power connections on and are running.

More than one of the slot LEDs are on at once.

Press and hold the game select button on the MultiJAMMA Controller board until all the lights go out (they should turn off one at a time). Only a single LED should be on at any time during normal operation. If you have more than one LED on verify that all the game boards you have attached have the power connections on and are running. The next game is selected by the microcontroller on the MultiJAMMA Controller by looking for the sync signal for the game. If the sync signal is missing, or is too low of level, the controller could become confused and not be able to select the game. A properly working game generating JAMMA standard negative composite sync should work.

Dim picture on monitor.

Make sure that all the game boards are supplied with power and ground and that all grounds are common (connected together somewhere). Test game boards without the MultiJAMMA in line to make sure it's not a monitor problem. If you're using IDE cables that did not come with the kit they could be too long, or too fine of gauge wire and are degrading the video signal.

Monitor display rolls or won't sync.

Is the monitor a fixed-scan monitor? The MultiJAMMA system can not automatically adjust sync rates. Test game boards without the MultiJAMMA in line to make sure it's not a monitor problem. If you're using IDE cables that did not come with the kit they could be too long, or too fine of gauge wire and are degrading the video signal.

Game graphics messed up/game doesn't display picture.

Are you supplying -5V to the game board by way of the "High-Current" connector on the Switchboard? Some games will need -5V for proper video output and to pass self-test. Test game boards without the MultiJAMMA in line to make sure it's not a board problem.

No sound, or poor quality sound.

Are you supplying -5V to the game board by way of the "High-Current" connector on the Switchboard? Some games will need -5V for proper audio output. Test game boards without the MultiJAMMA in line to make sure it's not a speaker or board problem. If you're using IDE cables that did not come with the kit they could be too long, or too fine of gauge wire and are degrading the audio signal.

Games generate credits or start when the cabinet is turned on.

The MultiJAMMA Controller needs to start-up and reset itself before other game boards start monitoring their inputs for coin drops. If you're using an older JAMMA board (or a 1980's era classic board with a JAMMA adapter) it is possible that power supply in the cabinet that the MultiJAMMA is running from can "come up" slower than the other power supplies that run the games. In that case, spurious credits/starts can occur as the MultiJAMMA initializes itself. The latest version of the MultiJAMMA Controller (1.4) starts up very quickly so this should not be a problem with the vast majority of JAMMA board, but if you run into the problem it can usually be solved by disconnecting the original cabinet power supply and running the MultiJAMMA off of one of the same power supplies that runs the game boards. An alternate method is to run the MultiJAMMA controlled from a small power supply that is always on (bypassing the cabinet power switch) and only have the game power supplies turn on with the main cabinet power switch.

Additional Help and Information:

If you're still stuck, or if you'd like to see some more examples (in color) of MultiJAMMA installations please consult the MultiJAMMA webpage and the FAQ there.

<http://www.multigame.com/jamma.html>

If you're still confused, you may wish to hire a professional to perform the installation for you. Due to the custom nature of each installation and the high risk of e-mail or telephone based instructions being misinterpreted, only "generic" help and troubleshooting instructions can be provided by Multigame.com.